

Factory Reset: Zebra Tabletop Barcode Printers



1 Power OFF the Printer.

- Power down the machine by locating the power switch located on the back of your Zebra printer and toggle the switch to power off mode.

View Our YouTube Channel for More Helpful How-To Videos!



2 Press/Hold the PAUSE + FEED Buttons.

- Locate the PAUSE and FEED buttons on your Zebra printer and press and hold them down.



3 Hold Buttons Down, Power ON Printer.

- Hold down PAUSE + FEED buttons while turning your Zebra printer back on.
- Continue holding buttons until printer begins reset process (5-10 seconds).
- Release buttons once you see indicators flash or hear a beep.
- Printer will reset to factory default settings and restart.

NOTE: The specific buttons may vary by model (e.g., some use PAUSE + CANCEL). Refer to your printer's manual if unsure.


Top 10 Reasons to Reset Your Zebra Printer

- 1. Network Configuration Issues**
Fixes problems with Wi-Fi or Ethernet settings.
- 2. Communication Failures**
Helps restore communication with computers or apps.
- 3. Misconfigured Settings**
Clears out bad label, speed, or print setup.
- 4. Changing Environments**
Prepares the printer for use in a different place.
- 5. Label/Media Detection Problems**
Helps the printer relearn the type of labels you're using.
- 6. Firmware Update Aftermath**
Fixes any weird behavior after an update.
- 7. Clearing Embedded Passwords**
Removes locked settings or passwords.
- 8. Printer Error States**
Clears stuck errors that won't go away.
- 9. Re-selling or Decommissioning**
Wipes your settings before handing it off.
- 10. General Troubleshooting Step**
A fresh start when other fixes don't work.



Repair Help is One Click Away

Fast, reliable service for your barcode equipment.

 1-800-728-8889

 sales@thermalprintersupplies.com

 www.thermalprintersupplies.com

 339 SW 6th Street, Des Moines, IA 50309

Click the Links Below to Find Out More.